

## DCP-2 & DCP-1203

### Quick Start Configuration Guide



DCP-2 + DCP-1203  
R12.1.1 A

The specifications and information within this manual are subject to change without further notice. All statements, information and recommendations are believed to be accurate but are

presented without warranty of any kind. Users must take full responsibility for their application of any products.

# Contents

<b>1</b>	<b>INTRODUCTION .....</b>	<b>4</b>
1.1	GENERAL .....	4
1.2	IN COMMERCIAL CONFIDENCE .....	4
1.3	DOCUMENT REVISION HISTORY .....	4
1.4	DOCUMENT REFERENCE .....	4
<b>2</b>	<b>DCP-2 INITIAL CONFIGURATION.....</b>	<b>5</b>
2.1	INSTALL CHASSIS AND CONNECT POWER.....	5
2.2	CONFIGURATION VIA LOCAL CONSOLE (ETH OR SERIAL) .....	5
2.3	LOGIN TO THE DCP-2 CHASSIS .....	5
2.4	SET THE BASIC CONFIGURATION. ....	5
2.5	GENERAL USE STATUS COMMANDS .....	6
<b>3</b>	<b>DCP-1203 INITIAL CONFIGURATION.....</b>	<b>8</b>
3.1	INSTALL DCP-1203 IN DCP-2 CHASSIS.....	8
3.2	SET THE BASIC CONFIGURATION. ....	8
3.3	GENERAL USE STATUS COMMANDS .....	10

# 1 Introduction

## 1.1 General

This guide covers the general Turn-up steps for the DCP-2 & DCP-1203 products.

## 1.2 In commercial confidence

The document is provided in commercial confidence and shall be treated as such.

## 1.3 Document Revision History

Revision	Date	Description of changes
Initial	2025-02-17	Initial release

## 1.4 Document Reference

Reference the following documents for the installation procedures, operation specifics, and CLI command references. All documents are available from the Smartoptics Services Portal

1.4.1 DCP User Manual

1.4.2 DCP-1203 User Manual

1.4.3 DCP CLI User Manual

## 2 DCP-2 Initial Configuration

### 2.1 Install Chassis and Connect Power

2.1.1 Install chassis and connect power per directions in the associated user manual.


### 2.2 Configuration via Local Console (Eth or Serial)

#### 2.2.1 Connect via Ethernet Local Console (Alternative 1)

2.2.1.1 Configure PC with a static IP address of 192.168.0.10, 255.255.255.0

2.2.1.2 Connect ethernet cable between the PC network port and the ETH0 console port on the rear of the chassis.

2.2.1.3 Start SSH client (putty or similar) and connect to 192.168.0.1, Port 22

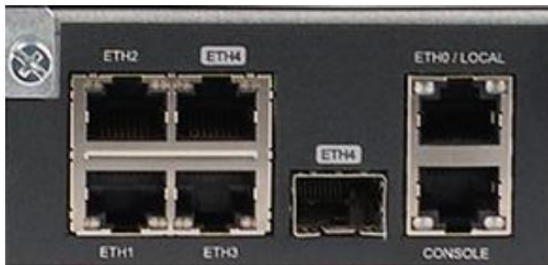

#### 2.2.2 Connect via Serial Local Console (Alternative 2)

2.2.2.1 Connect PC serial port to the local Console port on the rear of the chassis.

2.2.2.2 Start and configure the terminal client (putty or similar) with the following serial parameters:

Protocol	Serial
Baud Rate	115200
Data Bits	8
Parity	None
Stop bits	1
Flow Control	None
COM Port	PC Defined

### 2.3 Login to the DCP-2 Chassis

Default user/password = admin/admin

### 2.4 Set the Basic configuration.

#### 2.4.1 Configure Hostname

```
admin@smartoptics-dcp> config hostname <tab>
<hostname> - Hostname string. Max length 63 characters.
Valid characters are 0-9, a-z, A-Z, - and .
As long as - and . not as start/end character and digit not as start character.
Note that this is the same as the SNMP sysname.

admin@smartoptics-dcp> config hostname smartoptics-dcp
```

## 2.4.2 Configure Network Interface for Mgmt

```
admin@smartrptics-dcp> config network mgmt ipv4address <tab>
<IPv4 address>      - IPv4 address in dotted decimal format.
<netmask>           - IPv4 netmask in dotted decimal format.
[gateway IPv4 address] - IPv4 gateway address in dotted decimal format.

admin@smartrptics-dcp> config network mgmt ipv4address 10.10.10.2 255.255.255.0 10.10.10.1
```

## 2.4.3 Configure inactivity timeout (optional)

```
admin@smartrptics-dcp> config inactivitytimeout <time in minutes>

<inactivitytimeout> - Time in minutes until automatic logout occurs if there is no activity in CLI
<Time 0-300>.
```

## 2.4.4 Configure NTP (recommend either setting NTP or manual date/time)

Disable NTP when using manual date/time

```
admin@smartrptics-dcp> config ntp <tab>
adminStatus      - Configure NTP adminStatus : up / down
primaryServer    - Configure NTP primary server <primary NTP server IPv4 address>
secondaryServer  - Configure NTP secondary server <secondary NTP server IPv4 address>
```

## 2.4.5 Configure Date (recommend either setting NTP or manual date/time)

```
admin@smartrptics-dcp> config date <tab>
<date> - Date, in format YYYY-MM-DD
<time> - Time, in format HH:MM:SS
```

# 2.5 General Use Status Commands

## 2.5.1 show network interfaces

```
admin@smartrptics-dcp> show network interfaces

Mgmt:          if-1/eth1, if-1/eth2, if-1/eth3, if-1/eth4
IP Address:    10.10.72.97
Netmask:       255.255.255.0
Default gateway: 10.10.72.1
MAC address:   94:DE:0E:02:02:17

eth0 / local:
IP Address:    192.168.0.1
Netmask:       255.255.255.0
MAC address:   94:DE:0E:02:02:16

DNS primary:   10.10.72.99
DNS secondary: 10.10.72.101
```

## 2.5.2 show alarm active

Displays all currently active alarms

```
admin@smartrptics-dcp> show alarm active
Location Alarm name      Severity Start time
-----
psu-1/1  Power supply missing    critical 2018-05-30 07:05:16
if-1/2/2 Loss of optical input power critical 2018-0-19 04:59:52
```

### 2.5.3 show alarm log

Displays the log of alarms.

```
admin@smartoptics-dcp> show alarm log
```

Location	Alarm name	Severity	Start time	End time
psu-1/1	Power supply missing	critical	2018-05-30 07:05:16	-
if-1/2/3	Loss of optical input power	critical	2018-06-06 08:24:50	2018-06-06 09:28:55
if-1/2/1	Loss of optical input power	critical	2018-06-06 08:24:52	2018-06-06 09:28:55

### 2.5.4 show inventory

Displays the inventory details of the system.

```
admin@smartoptics-dcp> show inventory
```

Location	Part number	Description	HW rev	FW rev	Serial number
chassis	DCP-2	1U 2 slot chassis	R2A	n/a	F1845DCP20240
psu-1/1	DCP-2-PSU-AC-FB	AC power supply, front-to-back airflow	CK	n/a	L832130060CKZ
psu-1/2	DCP-2-PSU-AC-FB	AC power supply, front-to-back airflow	01F	n/a	DZRD1641088363
fan-1/1	DCP-2-FAN-FB	Fan, front-to-back airflow	R1B	n/a	n/a
slot-1/1	DCP-1203	3 x 100/400G Transponder	R1A	n/a	S230412030025
if-1/1/1	TQD013-TUNC-SO	QSFP-DD OpenZR+ High Tx Power Coh Tunable Flexgrid CMIS5.0 LC	A	70.130	231152357
if-1/1/2	TQD013-TUNC-SO	QSFP-DD OpenZR+ High Tx Power Coh Tunable Flexgrid CMIS5.0 LC	A	70.120	231051447
slot-1/2	DCP-404	4 x QSFP28 to 400G QSFPDD Muxponder	R1A	n/a	K2347D4040730
if-1/2/1	SO-QSFP28LR410L	QSFP28, 100GBase, 1310nm, SM, DDM, 10km, LC, DML Type	A1	n/a	VE2239002336
if-1/2/2	SO-QSFP28LR410L	QSFP28, 100GBase, 1310nm, SM, DDM, 10km, LC, DML Type	A1	n/a	VE204700627
if-1/2/3	SO-QSFP28LR410L	QSFP28, 100GBase, 1310nm, SM, DDM, 10km, LC, DML Type	A1	n/a	VA2333000812
if-1/2/4	SO-QSFP28LR410L	QSFP28, 100GBase, 1310nm, SM, DDM, 10km, LC, DML Type	A1	n/a	VA2333000810
if-1/2/5	TQD013-TUNC-SO	QSFP-DD OpenZR+ High Tx Power Coh Tunable Flexgrid CMIS5.0 LC	A	70.120	232650698

### 2.5.5 show version

Displays the SW release running on the system.

```
admin@smartoptics-dcp> show version
```

Location	SW version	Bootloader version	FW version	API version
chassis	dcp-release-10.0.2	2016.09.01-DCP-R2.1	n/a	n/a
slot 1	dcp-release-10.0.2	2019.07-DCP-R7.0	n/a	n/a
slot 2	dcp-release-10.0.2	2016.09.01-DCP-R2.1	0x8a000111	n/a

### 3 DCP-1203 Initial Configuration

#### 3.1 Install DCP-1203 in DCP-2 Chassis

DCP-1203 can be installed in slot 1 or slot 2 in a DCP-2 chassis. It is mandatory to have another card or a blind plate in the other slot of the DCP-2. This is to ensure correct air flow for cooling.



Each DCP-1203 offers three independent transponders operating from 100G to 400G line rates, enabling 6 x 400G DWDM channels per 1U (2.4Tb/s) for high-capacity needs.

Both the line client ports are combo ports that can host either QSFP28 or QSFP-DD transceivers. It is possible to use either grey or coherent optics in either port as long as the total quantity of coherent optics does not exceed 4x optics.

Before proceeding with the configuration, verify that the newly installed DCP-1203 module is running the same software release as the DCP-2 chassis. If there is a SW mismatch, upgrade the new module following the instructions in the Smartoptics Software Upgrade Guide.

#### 3.2 Set the Basic configuration.

##### 3.2.1 config slot <1/2> transponder <1-3> service <service type>

```
admin@smartoptics-dcp> config slot 1 transponder <1-3> service <tab>
```

400GbE-400GbE	4x100GbE-4x100GbE	3x100GbE-3x100GbE	2x100GbE-2x100GbE
1x100GbE-1x100GbE	100GbE-100GbE	OTU4-OTU4	4x100GbE-4x100GbE-breakout

```
admin@smartoptics-dcp> config slot 1 transponder 1 service 400GbE-400GbE
```

This command can be service interrupting.  
Are you sure you want to continue? (Yes/NO): yes

Transponder traffic configuration set to '400GbE-400GbE'.



### 3.2.2 config slot <1/2> interface <1-6> transceiver app <app mode>

The host format of both interfaces must match a given transponder (e.g. 400GAUI-8, 100GAUI-2, CAUI-4, etc). Using the help function (tab or ?) will provide the appropriate options based on the service type used in the previous step.

```
admin@smartoptics-dcp> config slot 1 interface 2 transceiver app <tab>
```

App	Payload Rate	Host Format	Media Format	FEC	Modulation	Media Code	Host Code
3*	400G	100GAUI-2 C2M (Annex 135G)	400ZR, DWDM, amplified	CFEC	DP-16QAM	3E	D
6	400G	100GAUI-2 C2M (Annex 135G)	400ZR-OFEC-16QAM	oFEC	DP-16QAM	C0	D
9	400G	100GAUI-2 C2M (Annex 135G)	400ZR-OFEC-16QAM-E	oFEC	DP-16QAM	CE	D

\* = Currently active application code.

```
admin@smartoptics-dcp> config slot 1 interface 2 transceiver app 6
```

App	Payload Rate	Host Format	Media Format	FEC	Modulation	Media Code	Host Code
3*	400G	100GAUI-2 C2M (Annex 135G)	400ZR, DWDM, amplified	CFEC	DP-16QAM	3E	D
6	400G	100GAUI-2 C2M (Annex 135G)	400ZR-OFEC-16QAM	oFEC	DP-16QAM	C0	D
9	400G	100GAUI-2 C2M (Annex 135G)	400ZR-OFEC-16QAM-E	oFEC	DP-16QAM	CE	D

\* = Currently active application code.

This command can be service interrupting.  
Are you sure you want to continue? (Yes/NO): yes

App '6' is selected

### 3.2.3 config slot <1/2> interface <1-6> transceiver gridspacing <50Ghz or 6.25Ghz>

For Flexgrid applications finer frequency resolution will be required with Flexgrid supported transceivers. The gridspacing parameter will need to be adjusted prior to setting the desired frequency in the next step. Step 3.2.3 is not necessary for 100Ghz or 50Ghz channel spaced configurations.

```
admin@smartoptics-dcp> config slot 1 interface 5 transceiver gridSpacing <tab>
```

```
50      6.25
```

```
admin@DCP-2>config slot 1 interface 5 transceiver gridSpacing 6.25
```

This command can be service interrupting.  
Are you sure you want to continue? (Yes/NO): yes

Grid spacing set to 6.25GHz.

### 3.2.4 config slot <1/2> interface <1-6> transceiver frequency <frequency>

This command is used to configure the frequency for ports with tunable transceivers. Frequency setting is available on tunable coherent DWDM transceivers. Use ? or Tab to get info on available options in CLI.

```
admin@smartoptics-dcp> config slot 2 interface 5 transceiver frequency <tab>
```

191.30000	191.35000	191.40000	191.45000	191.50000	191.55000	191.60000	191.65000	191.70000	191.75000
191.80000	191.85000	191.90000	191.95000	192.00000	192.05000	192.10000	192.15000	192.20000	192.25000
192.30000	192.35000	192.40000	192.45000	192.50000	192.55000	192.60000	192.65000	192.70000	192.75000
192.80000	192.85000	192.90000	192.95000	193.00000	193.05000	193.10000	193.15000	193.20000	193.25000
193.30000	193.35000	193.40000	193.45000	193.50000	193.55000	193.60000	193.65000	193.70000	193.75000
193.80000	193.85000	193.90000	193.95000	194.00000	194.05000	194.10000	194.15000	194.20000	194.25000
194.30000	194.35000	194.40000	194.45000	194.50000	194.55000	194.60000	194.65000	194.70000	194.75000
194.80000	194.85000	194.90000	194.95000	195.00000	195.05000	195.10000	195.15000	195.20000	195.25000
195.30000	195.35000	195.40000	195.45000	195.50000	195.55000	195.60000	195.65000	195.70000	195.75000
195.80000	195.85000	195.90000	195.95000	196.00000	196.05000	196.10000			

```
admin@DCP-2>config slot 2 interface 5 transceiver frequency 192.30000
```

This command can be service interrupting.  
Are you sure you want to continue? (Yes/NO): yes

Frequency set to '192.30000' THz.

## 3.3 General Use Status Commands

### 3.3.1 show slot <1/2> transponder

This command will show the details about a specific muxponder card.

```
admin@smartoptics-dcp> show slot 1 transponder
```

Transponder	Service	Interfaces	Link status	LLF mode
slot-1/1:	DCP-1203			
trp-1/1/1	4x100GbE-4x100GbE-breakout	if-1/1/1 <> if-1/1/2	up	
trp-1/1/2	4x100GbE-4x100GbE	if-1/1/3 <> if-1/1/4	up	
trp-1/1/3	400GbE-400GbE	if-1/1/5 <> if-1/1/6	up	

### 3.3.2 show interface

Displays summary table for all interfaces.

```
admin@smartoptics-dcp> show interface active
```

Interface	Port Type	Status [Rx/Tx]	Alarm	Rx power [dBm]	Tx power [dBm]	Format	FEC	Channel Id	Admin status	Description
slot-1/1:	DCP-1203									
if-1/1/1	client	n/a	critical	n/a	n/a	-	enabled	n/a	up	
if-1/1/1:1	client	down/down	ok	-	-	100GbE	enabled	n/a	-	
if-1/1/1:2	client	down/down	ok	-	-	100GbE	enabled	n/a	-	
if-1/1/1:3	client	down/down	ok	-	-	100GbE	enabled	n/a	-	
if-1/1/1:4	client	down/down	ok	-	-	100GbE	enabled	n/a	-	
if-1/1/2	line	up/up	ok	-11.2	-7.8	400GbE	disabled	D9310	up	
if-1/1/3	client	up/up	ok	-1.8	-2.0	4x100GbE	enabled	n/a	up	
if-1/1/4	line	up/up	ok	-12.0	-8.0	4x100GbE	disabled	D9310	up	
if-1/1/5	client	n/a	ok	n/a	n/a	400GbE	disabled	n/a	up	
if-1/1/6	line	n/a	ok	n/a	n/a	400GbE	disabled	D9210	up	

### 3.3.3 show interface diagnostics

Displays summary table of diagnostics for all active interfaces with FEC in use.

```
admin@smartoptics-dcp> show interface diagnostics
```

Interface	Per second FEC counters				Accumulated FEC counters			
	Uncorrected errors	Corrected errors	Corrected 0->1	Corrected 1->0	Uncorrected errors	Corrected errors	Corrected 0->1	Corrected 1->0
=====	-----	-----	-----	-----	-----	-----	-----	-----
DCP-1203								
if-1/1/1								
lane 1	0	0	n/a	n/a	0	7615294	n/a	n/a
lane 2	0	0	n/a	n/a	0	48431250	n/a	n/a
lane 3	0	0	n/a	n/a	0	6105953	n/a	n/a
lane 4	0	0	n/a	n/a	0	2774600	n/a	n/a
if-1/1/2								
lane 1	0	0	n/a	n/a	0	73361	n/a	n/a
lane 2	0	0	n/a	n/a	0	2138	n/a	n/a
lane 3	0	0	n/a	n/a	0	933	n/a	n/a
lane 4	0	0	n/a	n/a	0	13151	n/a	n/a
if-1/1/3								
lane 1	0	0	n/a	n/a	0	56608869	n/a	n/a
lane 2	0	0	n/a	n/a	0	598070	n/a	n/a
lane 3	0	0	n/a	n/a	0	46122797	n/a	n/a
lane 4	0	0	n/a	n/a	0	3564375	n/a	n/a
if-1/1/4								
lane 1	0	0	n/a	n/a	0	190689	n/a	n/a
lane 2	0	0	n/a	n/a	0	313525	n/a	n/a
lane 3	0	0	n/a	n/a	0	2630652	n/a	n/a
lane 4	0	0	n/a	n/a	0	7311884	n/a	n/a
if-1/1/5		0	n/a	n/a	0	331788426	n/a	n/a
if-1/1/6		0	n/a	n/a	0	517795882	n/a	n/a

### 3.3.4 show interface if-1/<slot 1/2>/<interface 1-6>

Displays detailed info about a specific interface.

```
admin@smartoptics-dcp> show interface if-1/1/1

Interface      : 1
Muxponder     : trp-1/1/1
Description    :

Status:

Admin status   : up
Oper status    : up
Status [Rx/Tx] : up/up
Module state   : Ready

Temperature                : 57.0 [C]
Temperature high warning threshold : 75.0 [C]
Temperature high alarm threshold  : 80.0 [C]
Wavelength               : 1558.98 [nm]
Channel Id                : D9230
Actual Frequency          : 192.30000 [Thz]
Wanted Frequency          : 192.30000 [Thz]
Grid spacing              : 50 [Ghz]

Optical total Rx power     : -13.3 [dBm]
Optical signal Rx power   : -13.1 [dBm]
Optical Tx power           : -8.6 [dBm]
Tx bias current            : 64.0 [mA]
Rx sensitivity             : -21.0 [dBm]

Use LOS override          : disabled
TRX Rx LOS threshold      : -28.2 [dBm]
Rx configured LOS threshold : -40.0 [dBm]

Modulation Type           : 16QAM
Bandwidth                  : 400 [Gb/s]
FEC                        : oFEC
Pulse shaping              : disabled

Certified                  : yes

OSNR                       : 26.2 [dB]
Chromatic Dispersion       : -1 [ps/nm]
Diff Group Delay           : 2 [ps]
Polarization Dependent Loss : 1.2 [dB]
Pre-FEC BER                : 7.04e-03
Pre-FEC BER avg            : 5.00e-03
Uncorrected BER            : 0.00e+00
Uncorrected BER avg        : 0.00e+00
Q-Value                    : 7.8 [dBQ]
Q-Margin                   : 0 [dBQ]

Alarms:

Loss of lock               : ok
Loss of signal             : ok
Transceiver missing        : ok
High temperature warning   : ok
High temperature alarm     : ok
High temperature shutdown  : ok

Transceiver:

Type                       : Optical
Part Number                : SO-TQSFPPDD4CCZRP
Serial Number              : 123456789
FW revision                 : 61.20.13
HW revision                 : A
Vendor                     : SmartOptics
Description                 : QSFP-DD, OIF400ZR/OpenZR+, Coh-T, SM, DDM, LC
```